




# Professional Series PS77401 Chassis Replacement

This guide will cover replacing the chassis of a Professional Series PS77401 toaster. Disassembly of most of the major components on the toaster is required.

Written By: Kevin

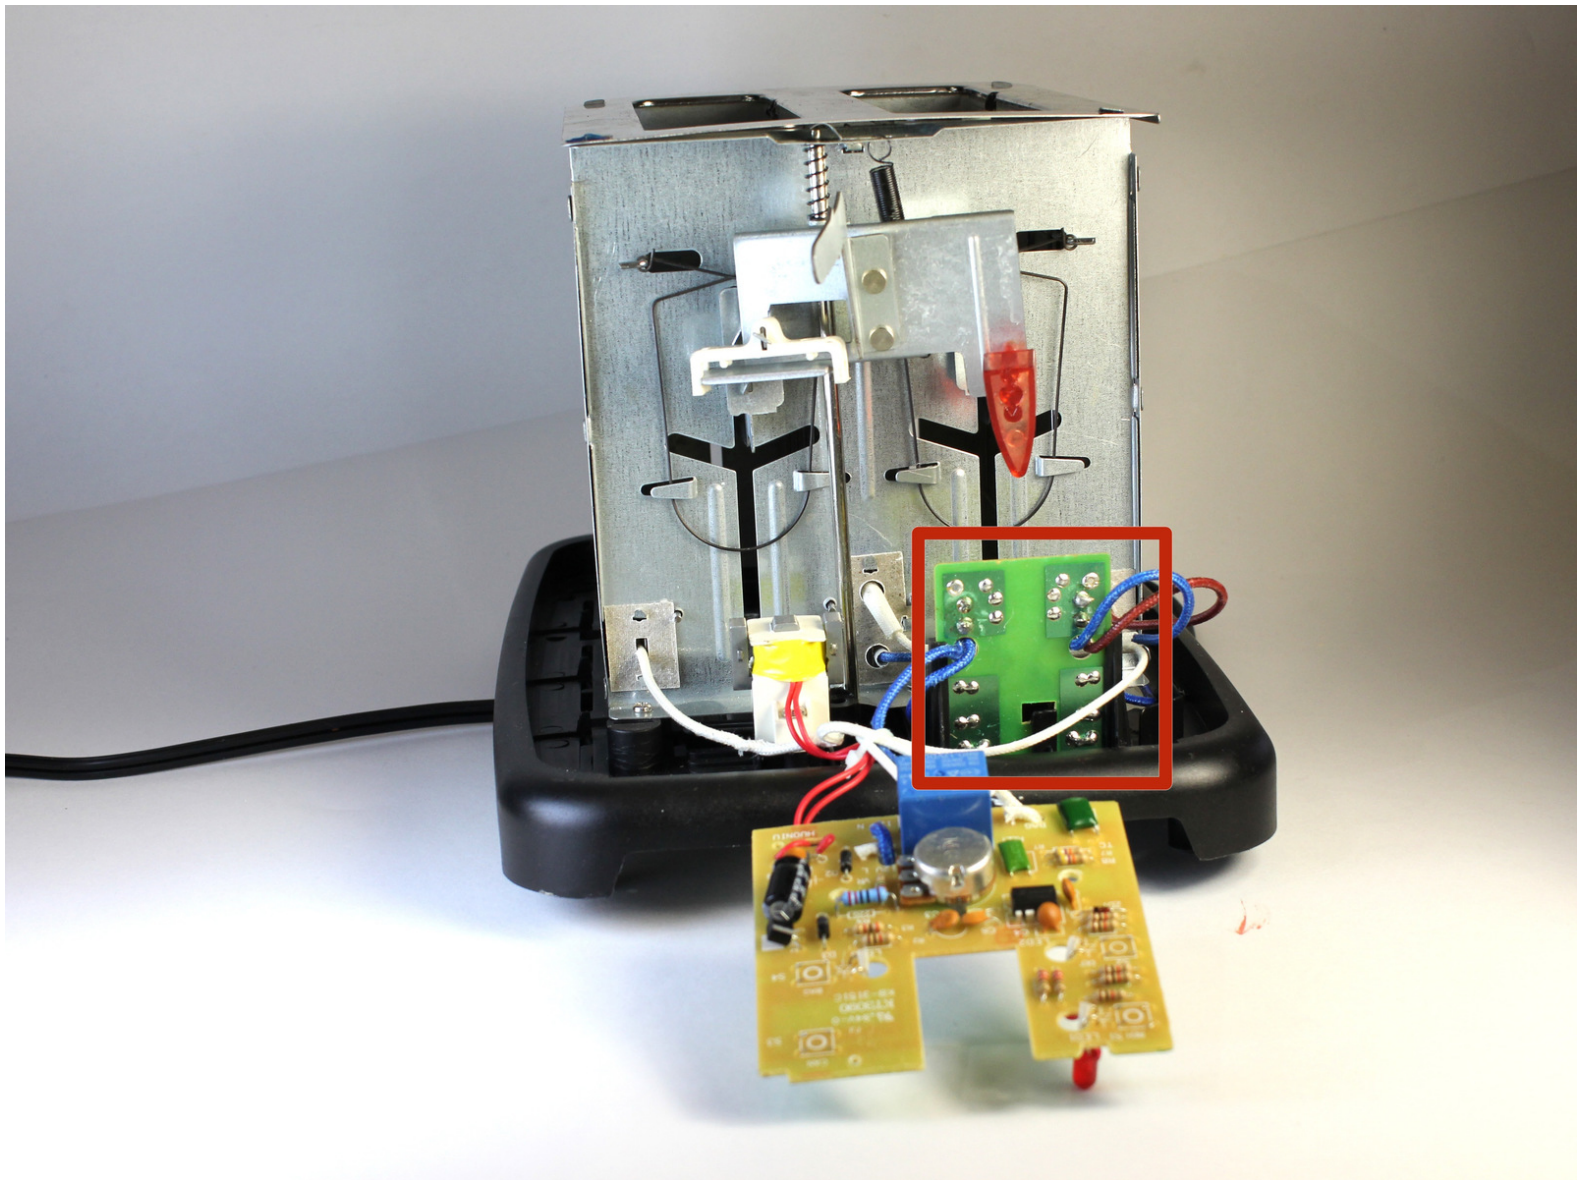

## INTRODUCTION

This guide will show how to remove the chassis from a Professional Series PS77401 toaster. The chassis may be damaged from a high height drop and may need replacing to allow even toasting. This guide is not a repair guide and requires a replacement toaster chassis.

---



### TOOLS:

- [T7 Torx Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Shell



- ★ Make sure that the toaster is unplugged before attempting any sort of disassembly!

## Step 2



- Grip the black plastic lever nub firmly and *carefully* remove it from the metal lever. Use one hand to hold the toaster in place while you pull the lever nub with the other.

⚠ If this is the first time detaching this piece, it will take some effort to remove. Be careful as pulling too hard can cause damage to the inner lever mechanism.



## Step 3




- Flipping the toaster upside down, use a T7 Torx Screwdriver to remove the four 10mm screws that keep the outer shell attached.
  - Flip the toaster back over and slide off the shell making sure to slip the toaster lever (now without the black plastic nub) through the lever opening in the shell.
- i** The outer shell should now only be connected by its internal wiring.

## Step 4



- Locate and remove the two 8mm screws that attach the circuit board (located inside of the shell) from the shell itself using the Phillips #2 screwdriver.
- i** The shell should now be completely separated from the rest of the toaster.

## Step 5 — Chassis

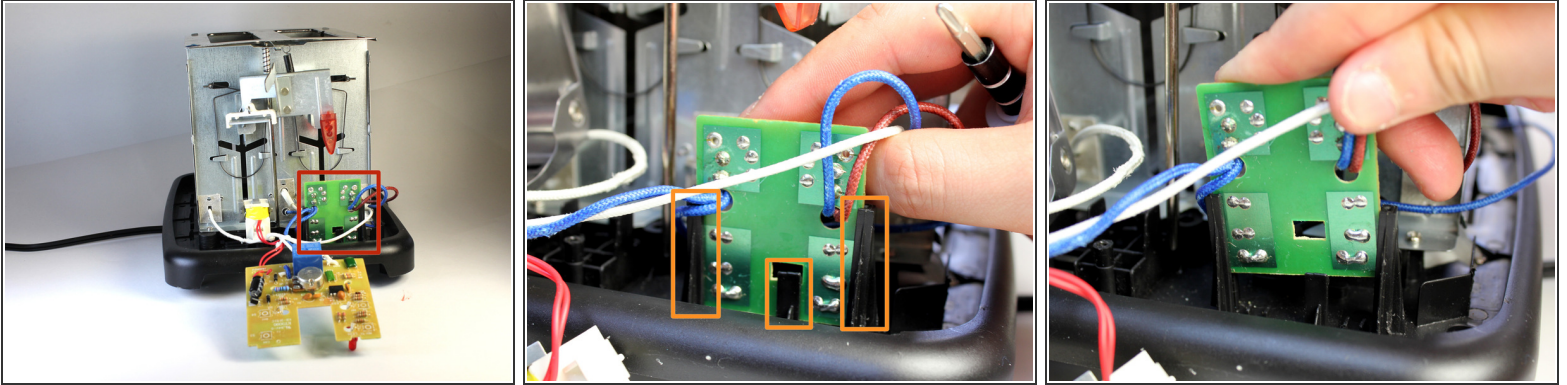

- Locate the small circuit board attached to the base of the toaster.
- To remove the circuit board, pull apart the two side tabs while releasing the middle tab simultaneously.
- Pull the circuit board out of the slot.


## Step 6



- Using a Phillips #2 screwdriver, remove the front two 8mm screws attaching the chassis to the base.
- Flip the toaster around and proceed to remove the two remaining 8mm screws.
- The toaster chassis should now only be connected to the base via wiring.





## Step 7

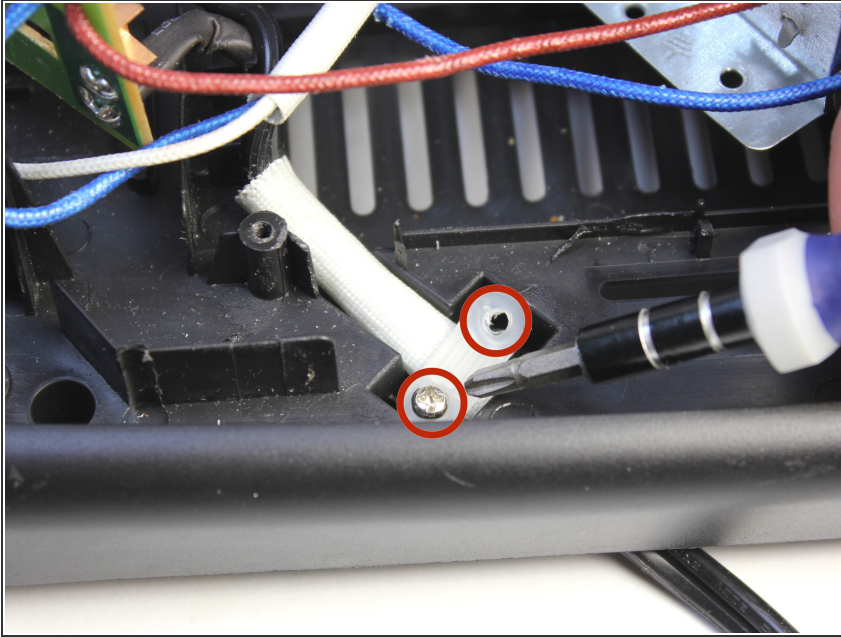

- There are two phillips 8mm head screws holding the power cable to the base.
- Remove these screws to release the power cable.

## Step 8

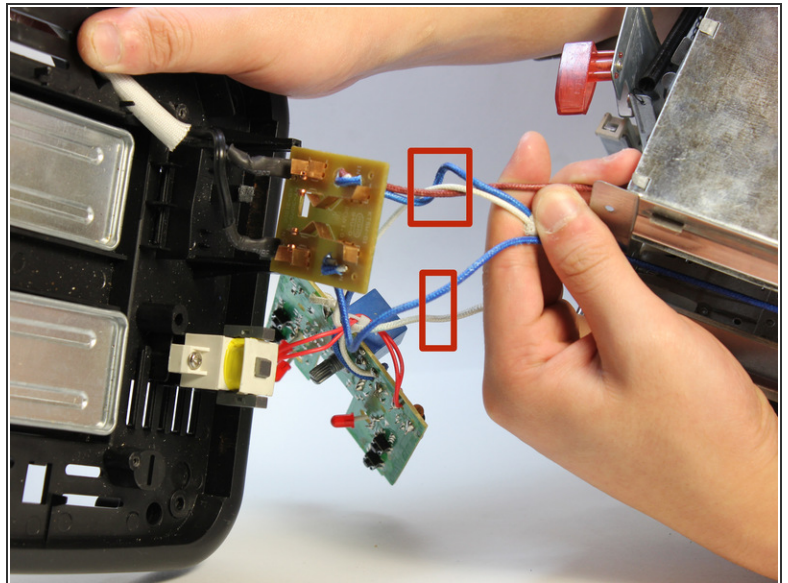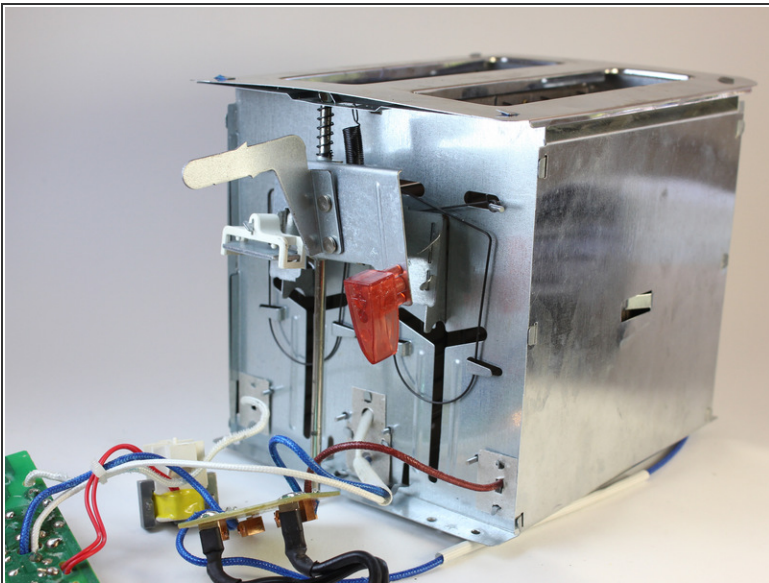

- The following wires must be disconnected to be able to remove the chassis: Blue x2, White x2, Bronze x1
- ⓘ Disconnecting the cables in the middle is recommended to be able to reconnect new wires from a new chassis easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:03:26 PM.